
INSTALLATION INSTRUCTIONS

DHP 31-16




Constant supply air temperature with FL 30 P channel sensor

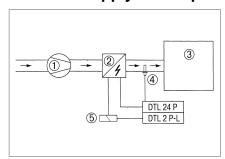


- ① Fans
- ② Electrical air heater
- 3 Room
- FL 30 P channel sensor
- ⑤ Contactor

Constant room temperature with FR 30 P room sensor

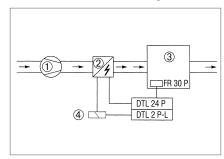

- ① Fans
- ② Electrical air heater
- 3 Room
- 4 FR 30 P room sensor
- ⑤ Contactor

Constant room temperature with FR 30 P room sensor and FL 30 P channel sensor

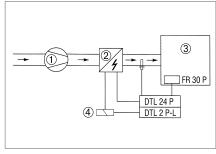

- ① Fans
- ② Electrical air heater
- 3 Room
- 4 FL 30 P channel sensor
- ⑤ FR 30 P room sensor
- 6 Contactor