
INSTALLATION INSTRUCTIONS

DRH 16-5



Constant room temperature

Temperature measurement with integrated sensor in ETL 16 P or DTL 16 P

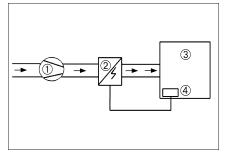

① Fans


2 Electrical air heater

③ Room

④ ETL 16 P, DTL 16 P

Constant supply air temperature with FL 30 P channel sensor


Limitation of the maximum supply air temperature with FL 30 P channel sensor

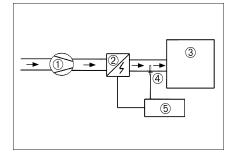

① Fans

- 2 Electrical air heater
- ③ Room
- ④ FL 30 P channel sensor
- 5 ETL 16 P

Constant room temperature with FR 30 P room sensor

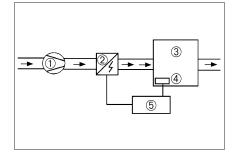

1 Fans


- 2 Electrical air heater
- ③ Room
- ④ FR 30 P room sensor
- ⑤ ETL 16 P

INSTALLATION INSTRUCTIONS

DRH 16-5



Constant room temperature with FR 30 P room sensor and FL 30 P channel sensor

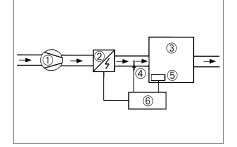

 $\textcircled{1} \mathsf{Fans}$

- 2 Electrical air heater
- ③ Room
- ④ FL 30 P channel sensor
- 5 FR 30 P room sensor
- 6 DTL 16 P