
INSTALLATION INSTRUCTIONS

DRH 20-5



Constant room temperature


Temperature measurement with integrated sensor in ETL 16 P or DTL 16 P

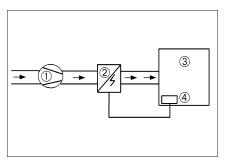

- ① Fans
- ② Electrical air heater
- 3 Room
- **4** ETL 16 P, DTL 16 P


Constant supply air temperature with FL 30 P channel sensor

Limitation of the maximum supply air temperature with FL 30 P channel sensor

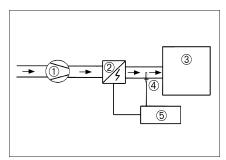

- ① Fans
- ② Electrical air heater
- 4 FL 30 P channel sensor
- **5** ETL 16 P

Constant room temperature with FR 30 P room sensor

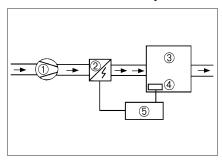


- ① Fans
- ② Electrical air heater
- 3 Room
- ④ FR 30 P room sensor
- ⑤ ETL 16 P

INSTALLATION INSTRUCTIONS

DRH 20-5



Constant room temperature with FR 30 P room sensor and FL 30 P channel sensor

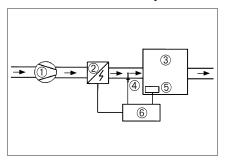

- ① Fans
- ② Electrical air heater
- 3 Room
- ④ FL 30 P channel sensor
- ⑤ FR 30 P room sensor
- 6 DTL 16 P