
## **INSTALLATION INSTRUCTIONS**

## **DZR 20/2 B**



## **EZR/DZR** - installation in ventilation duct

- The diagram shows a typical installation situation for EZR/DZR duct fans. The fans are integrated into the ducting using flexible couplings.
- Recommended distance to the next element is a minimum of 3 5 x the duct diameter.
- If the cross-section narrows: small duct diameter < 0.75 x large duct diameter, angle of inclination 6-8°.

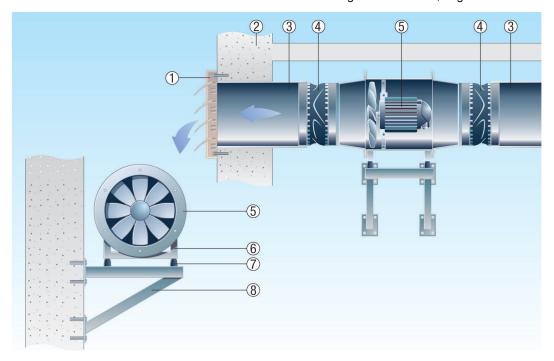

- ① External shutter, airstream operated
- ② Outside wall
- 3 Ventilation duct, to be supplied by the customer
- Flexible coupling
- ⑤ Fan
- 6 Mounting feet
- Vibration damper
- ® Bracket, to be supplied by the customer