

# INSTALLATION INSTRUCTIONS



## DZR 20/2 B Ex e

### Installation in ventilation duct

- Recommended distance to the next fitting is at least 3-5 x the duct diameter "D"
- If the cross-section narrows: Duct diameter "d" = max. 0.75 x duct diameter "D", angle of inclination 6-8°
- ① Shutter, airstream-operated
- ② Exterior wall
- ③ Ventilation duct, to be provided by the customer
- ④ ELA..-Ex flexible coupling
- ⑤ Fan
- ⑥ FU mounting feet (1 set)
- ⑦ GP.. vibration damper
- ⑧ Bracket, provided by the customer