
## **INSTALLATION INSTRUCTIONS**

## 

## DZR 25/42 B

## EZR/DZR - installation in ventilation duct

- The diagram shows a typical installation situation for EZR/DZR duct fans. The fans are integrated into the ducting using flexible couplings.
- Recommended distance to the next element is a minimum of 3 5 x the duct diameter.
- If the cross-section narrows: small duct diameter < 0.75 x large duct diameter, angle of inclination 6-8°.

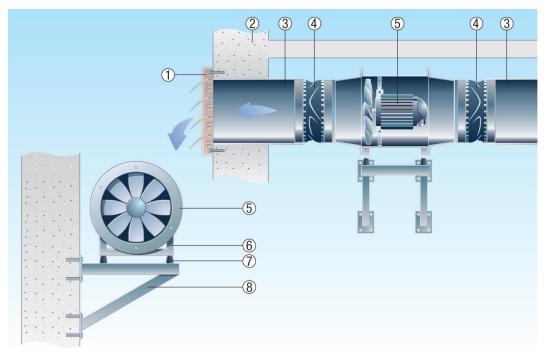

- ① External shutter, airstream operated
- ② Outside wall
- ③ Ventilation duct, to be supplied by the customer
- ④ Flexible coupling
- ⑤ Fan
- 6 Mounting feet
- $\ensuremath{\textcircled{}}$   $\ensuremath{\textcircled{}}$  Vibration damper
- <sup>®</sup> Bracket, to be supplied by the customer