INSTALLATION INSTRUCTIONS

ECR-A 25/31



ECR supply and exhaust air system with integrated air heater and filter.

- Matched to one another Supply and exhaust air box with synchronised air volumes.
- Convenient control Supply and exhaust air boxes can be set using a shared remote control.
- Pre-assembled Supply air unit with fan, electric air heater, filter and controller. Makes fast and error-free installation possible
- Tempered With pluggable, continuous controller. For constant, pleasantly temperate supply air, even in winter.
- Quiet Double-wall, sound insulated housing. For high demands for low noise levels and high levels of thermal insulation.
- "Point-of-use" Can be used directly in the lounge, e.g. in suspended ceilings.
- **Simple** Filter can be changed in seconds, without tools.
- Can be combined in any way Supply and exhaust air boxes can be used in tandem and on their own.


ECR compact box and ECR-A exhaust air box in tandem



INSTALLATION INSTRUCTIONS

ECR-A 25/31



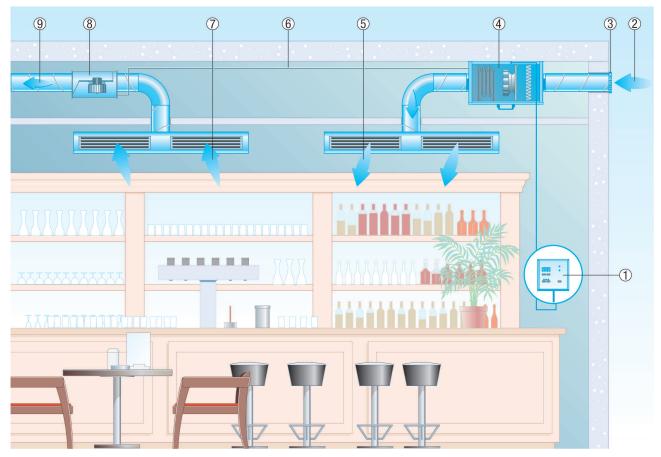

- ① Remote control
- ② Outside air
- 3 Lamella protective grille
- **4** ECR Compact Box
- Supply air
- Mains and control cable
- ⑦ Exhaust air
- ® ECR-A Exhaust air box
- 9 Outgoing air