

## MFU 2

### Frequency converter

Frequency converters are suited to the DAS / DSQ / DSK and EDR 56/63/71 series as standard.

- Units of the DZ... series must be fitted with phase isolation for operation on the frequency converter (special version). The factory must be contacted.
- The input and output must not be confused when connecting the frequency converters:
  - Input L1/L2/L3
  - Output U/V/W
- Sheathed cable must be used between the frequency converter and motor.