


ENR 20, ENR 25, ENR 31 with on/off switch and three-position switch

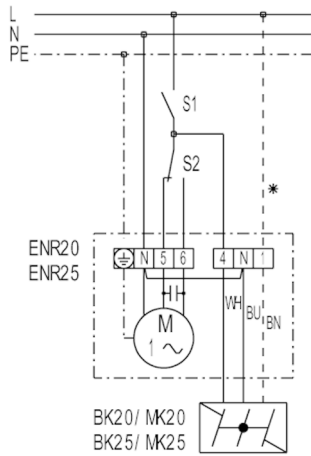

S1 - On / Off


S2 - Switching between air extraction and ventilation

Terminal 5 - Air extraction

Terminal 6 - Ventilation


* - duct only for MK... shutter

BK with EN... wall fan, without speed control

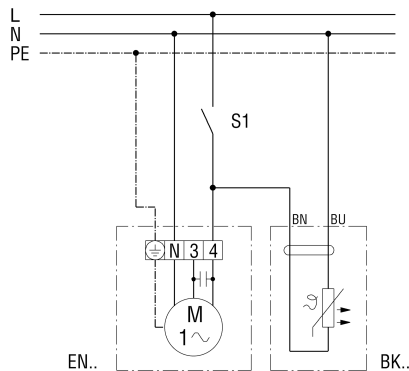


S1 fan On/Off, to be supplied by the customer

BK with EN... wall fan, without speed control

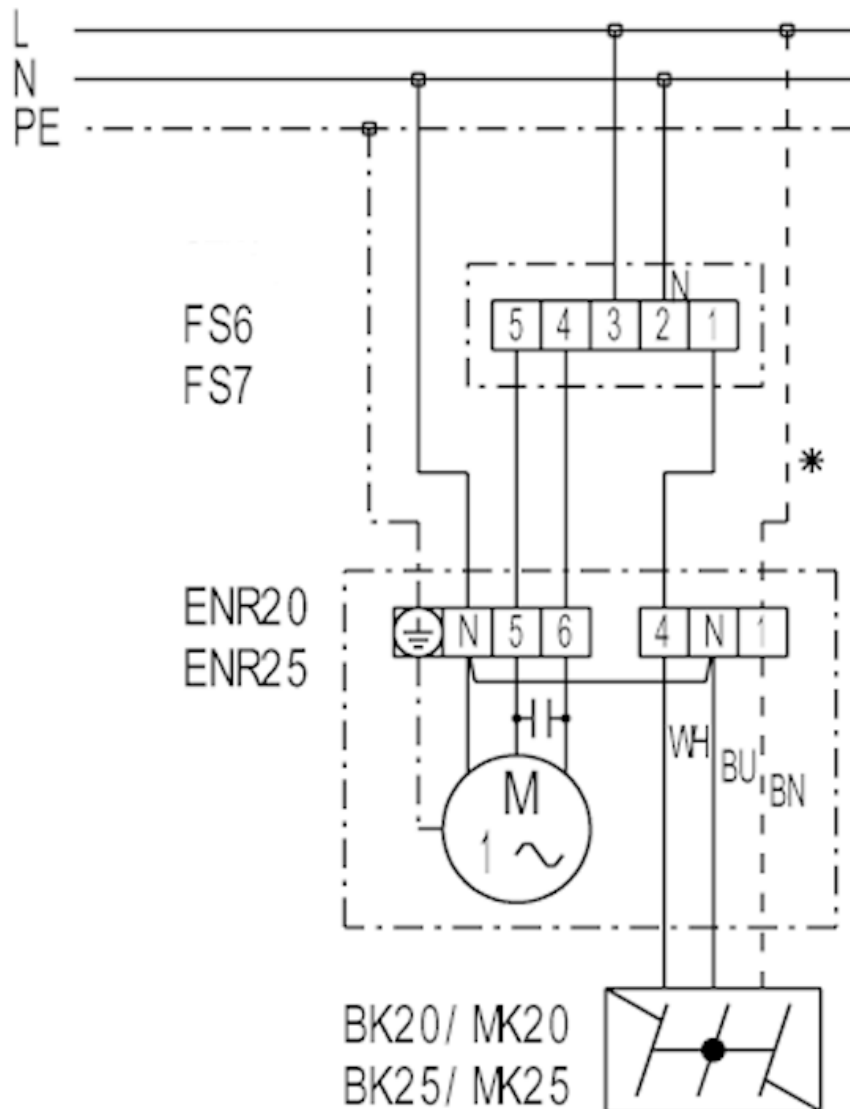


S1 fan On/Off, to be supplied by the customer

ENR 20, ENR 25, ENR 31 with W 1, WU 1 reversing switch

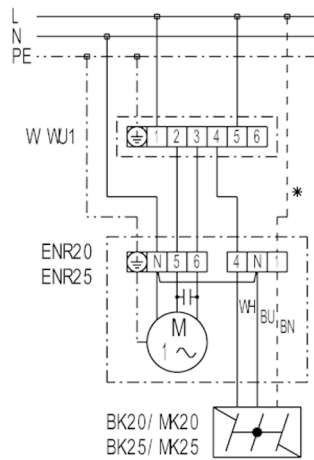


W 1 - Reversing switch (air extraction or ventilation), surface-mounted
 WU 1 - Reversing switch (air extraction or ventilation), recessed-mounted
 * - duct only for MK... shutter

BK with ENR... fan and STW 2,5 speed controller for surface installation

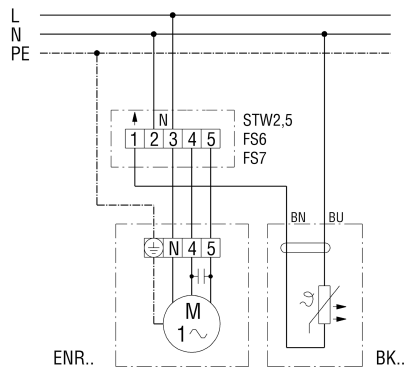

FS 6 - Step switch: 2 speeds, ventilation / air extraction (FS 6 cannot be used for ENR 31)
 FS 7 - Step switch: Ventilation / air extraction


BK with ENR... fan and STW 2,5 speed controller for surface installation

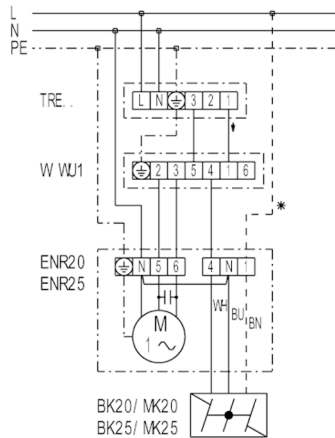

FS6 - Step switch: 2 speeds, ventilation / air extraction (FS 6 cannot be used for ENR 31)

FS7 - Step switch: Ventilation / air extraction

ENR 20, ENR 25, ENR 31 with TRE 5-step transformer and three-position switch

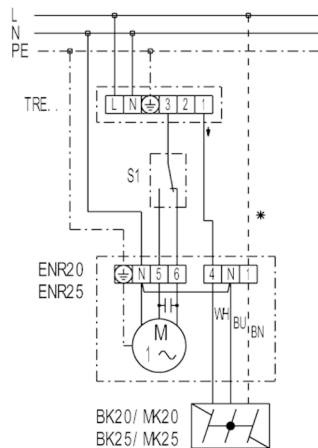


TRE - 5-step transformer (on/off, 5-speed)

S1 - Reversing switch (air extraction or ventilation)

* - duct only for MK... shutter

ENR 20, ENR 25, ENR 31 with TRE..S 5-step transformer and ESS 20 5-step switch.

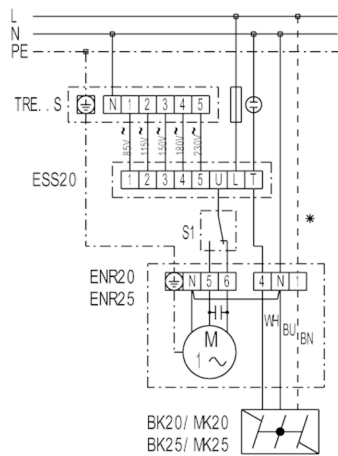

TRE - 5-step transformer, control cabinet installation

ESS 20 - 5-step switch (on/off, 5-speed)

S1 - Reversing switch (air extraction or ventilation)

* - duct only for MK... shutter