


WIRING DIAGRAM

DAS 100/4

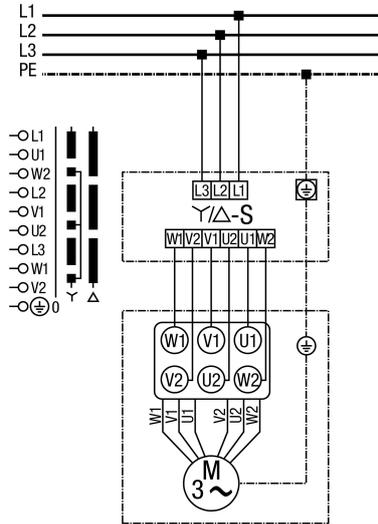

S - Switch

to be supplied by customer

When using a star-delta switch: Remove bridges V2 - U2 - W2 on the DAS terminal strip.