



# WIRING DIAGRAM

## EAQ 10/3

EAQ 10/3 wiring diagram

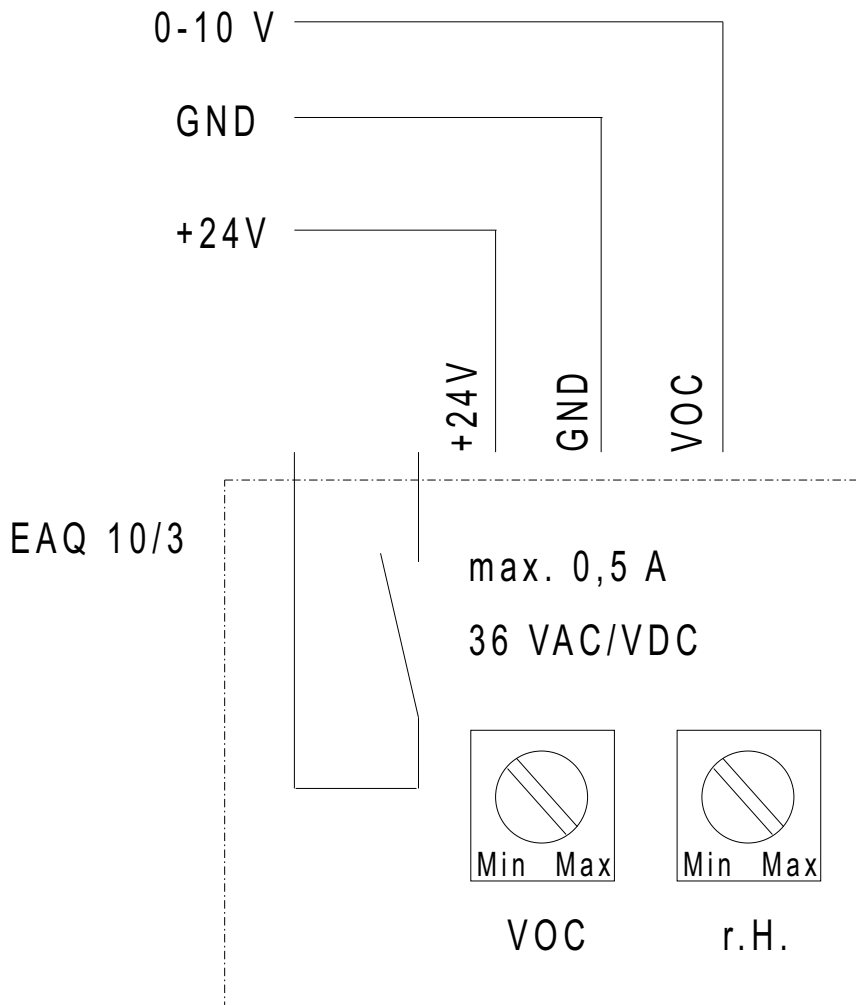

### Connection example: potential-free contact of EAQ 10/3 air quality controller

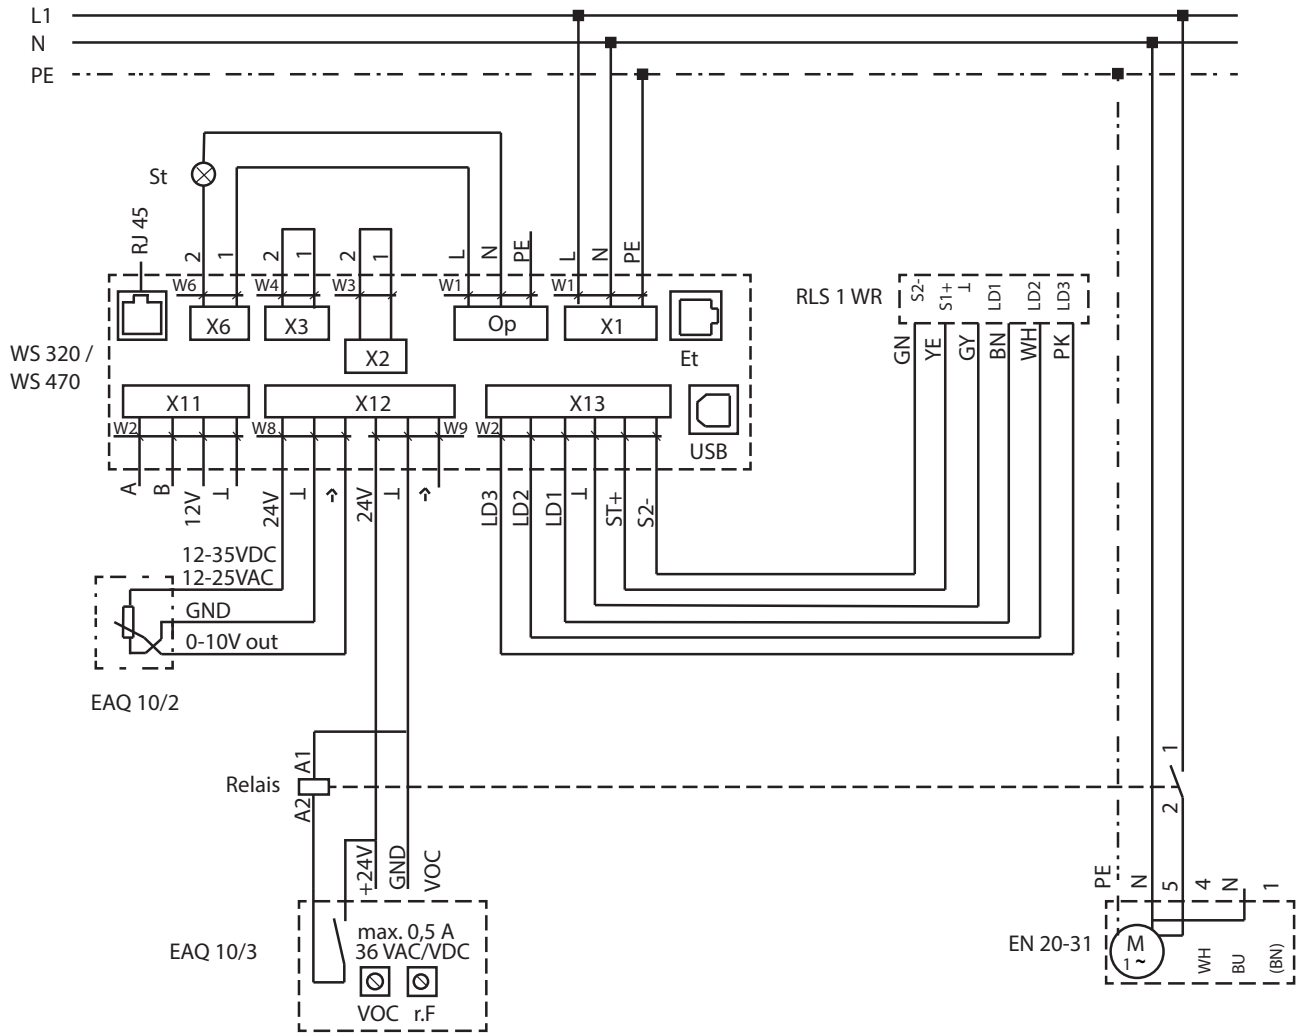

In the wiring diagram, the EAQ 10/3 is operated in a party cellar along with an EN wall-mounted fan.

Fuse protection provided by customer

St - Fault message

Et - Ethernet

X1 - Mains

X2 - 12V/2A

X3 - 230V/16A

X6 - 230V/5A

X11 - RS485

X12 - Sensors

X13 - RLS

r.H. - Humidity