
WIRING DIAGRAM

ECR 16



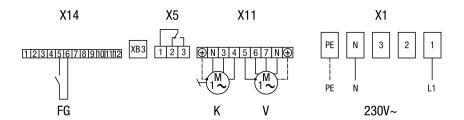

FG - Unit release

XB3 - Operating panel

X5 - Unit fault

K - Shutter drive

V - Exhaust air fan

X11-3 - Open

X11-4 - Closed

X11-5 - Slow

X11-6 - Medium

X11-7 - Fast