
WIRING DIAGRAM

EVN 22 R



EVN 22 R

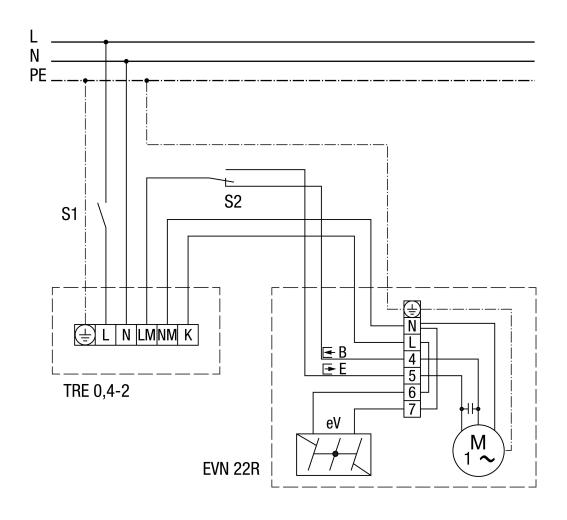

① Electrical shutter (outside)

S1 - On / Off

S2 - Switching between air extraction or ventilation

B - Ventilation (terminal 4)


E - Air extraction (terminal 5)

WIRING DIAGRAM

EVN 22 R



EVN 22 R with STW controller, FS 6, FS 7

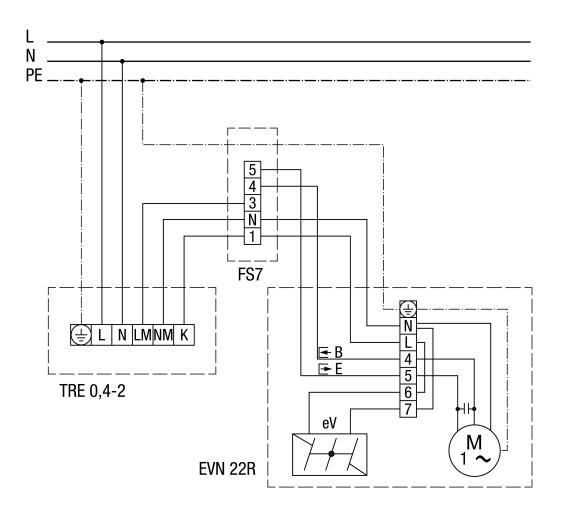

① Electronic shutter (external)
FS 6 - Step switch for (2-speed, air extraction or ventilation)
FS 7 - Reversing switch (air extraction or ventilation)
B - Ventilation (terminal 4)
E - Air extraction (terminal 5)