


WIRING DIAGRAM

PP+800

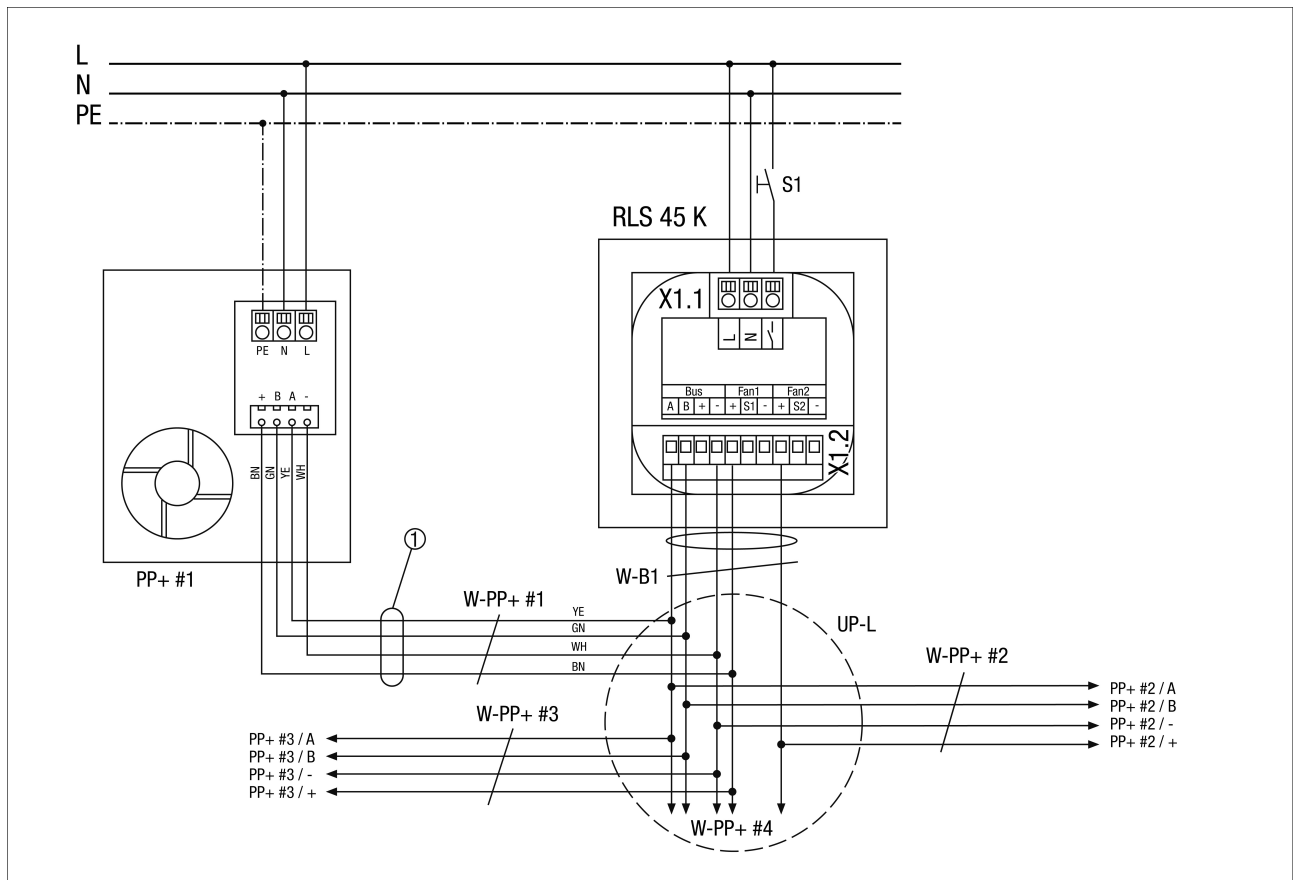

① 1 - Unit comes with cable (2 metres) ST J-Y(ST)Y 2 x 2 x 0.8 mm

RLS 45K – PushPull 45 Comfort room air control

PP+ #1 - Fan unit 1 PushPull

PP+ #2 - Fan unit 2 PushPull

PP+ #3 - Fan unit 3 PushPull

PP+ #4... - Fan unit PushPull #4 up to #8

S1 - Switch additional function (sleep, intensive, imbalance, safety function)

UP-L - flush-mounted distributor fan units, connection of all fan units in a star configuration to the distributor

W-B1 - Control cable for control distributor, recommended control cable ST J-Y(ST)Y 4 x 2 x 0.8 mm. Maximum cable length from the control unit to the distributor UP-L = 4 m

W-PP+ #X - Control cable PP+ (bus), recommended control cable J-Y(ST)Y 2 x 2 x 0.8 mm. Max. cable length from distributor UP-L to fan unit PP+ = 25 m

ye - yellow

gr - green

wh - white

br - brown